# Enclosure Product Manual. DC Motor Control

graduated scale. These enclosures contain the 370, 400, 800, and 1200 0.50KW to 1.8KW in either forward only or reversing variants (Suffix ER). A range of enclosures for professional use, available in seven models. From controllers with extensive specification and versatility. interlocked reversing, dynamic braking, set speed potentiometer with Features include, Mains On/Off switch, dual voltage supply, zero speed

Please also refer to the appropriate Drive Manual

### **MECHANICAL** DIMENSIONS

Fusing

### Part No. CH0036A3 5 x 20, 6.3A, 50 l2t 370, 400, 400ER Internal fuses

 $\bigcirc$ 

0

**BACK PANE** 

OF ENCLOSURE

Mounting Detail.

**6** 

250

800E 800ER

Part No. CH00620A 1200E 1200ER

6 x 32, 20A, 365 l2t

1.5 x arm current HRC type minimum External fuses

### 195 $\bigcirc$ M5 fixings on base plate Provision for 4 off Not to scale $\circ$

## ALL MODELS

AC Supply voltage

Armature Voltage Output

Field Voltage.

100/210V DC 90/180V DC

110/240V

Cable Entry

95

Controls- On/Off supply rocker switch. Set speed potentiometer. Reversing models have Forward, Stop, Reverse toggle switch. Integral AC supply semiconductor fuse in drive module

## 370E

Max Armature current 3.7A

800E, 800ER 400E, 400ER

0.55KW

1200E, 1200ER

Max Armature current 4.0A 0.50KW


Max Armature current 8.0A 1.1KW

Max Armature current 12.0A

1.8KW

TEL. +44 (0) 1903 730000 FAX. +44 (0) 1903 730893

400ER, 800ER, 1 Drive ē[<u>o</u> 66 चै⊚65 च**ि6**4 200ER COM 8 §<u>@</u>]56 10 ō 🗇 54 12 13 တ္ခုစ္ 52 ្ខំ[0]51 31 32 27 26 25 24 23 22 21 R F M P 10 40 24 25 24 23 22 21 2333435363738 STOP() FWD/ MOTOR Q REVERSING UNIT

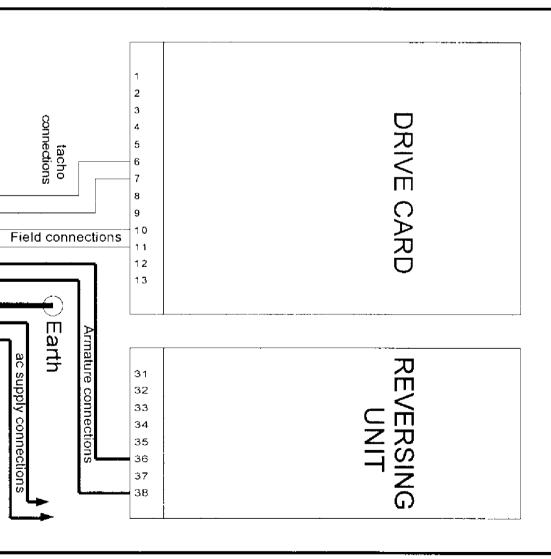



SPRINT ELECTRIC LTD. DOES NOT ACCEP ANY LIABILITY WHATSOEVER FOR THE INSTALLATION, FITNESS FOR PURPOSE OF AND INSTALLED RPOSE OR IT IS THE URE THE

ELECTRIC SHOCK RISK

HEALTH AND SAFETY AT WORK, ELECTRICAL DEVICES CONSTITUTE A SAFETY HAZARD IT IS THE RESPONSIBILITY OF THE USER TO ENSURE COMPLIANCE WITH ANY ACTS OR BYLAWS IN FORCE, ONLY SKILLED PERSONS SHOULD INSTALL THIS EQUIPMENT.

Rudford Industrial Estate

240V AC operation. For use

Connect incoming AC supply to rocker switch. Note these units are factory preset for

with 110V AC supply change mains selector jumper on drive

unit AND move AC input from terminal 21 to terminal 22 on the reversing unit.

Ford, Arundel, West Sussex Great Britain, BN18 0BE

www.sprint-electric.com