

Combivis,

:


1. («COM- » – 00.F5.060-2000)

1. KEB F5;
2. (. 00.F5.060-2000);
3. (COM-) D-Sub9, RS232 (USB/RS232, -);
4. RS232 (. 00.58.025-001D) (3).

RS232
00.F5.060-2000. (D-Sub9)

RS232:

9 –контактный соединитель SUB-D 9 –контактный соединитель SUB-D

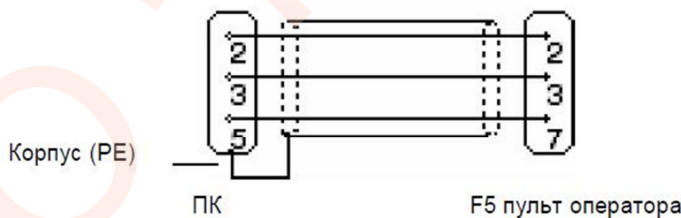

RS232
00.F5.060-2000.



COM-порт ПК



Кабель RS232
арт. номер 00.58.025-001D



Пульт оператора
арт. номер 00.F5.060-2000



Разъем X6C

2. («COM-» –)

_____ / (_____)

1. : KEB F5;
 2. (COM-) D-Sub9, RS232/485 (USB/RS232,);

3. KEB- (HSP5) (. **00.F5.0C0-0010**) (2).

KEB-


TTL

9 – контактный соединитель SUB-D

9 – контактный соединитель SUB-D



ПК

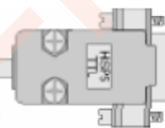

F5-плата управления

:

COM-порт ПК



Кабель KEB-Сервис (HSP5) арт. номер 00.F5.0C0-0010



ПЧ Разъем платы управления X4A



3. («USB- » –
00.F5.060-2000)


1. KEB F5;
2. (. 00.F5.060-2000) – ;
3. USB- ;
4. USB serial Converter (. 00.58.060-0020).



USB serial Converter

00.F5.060-2000.

USB

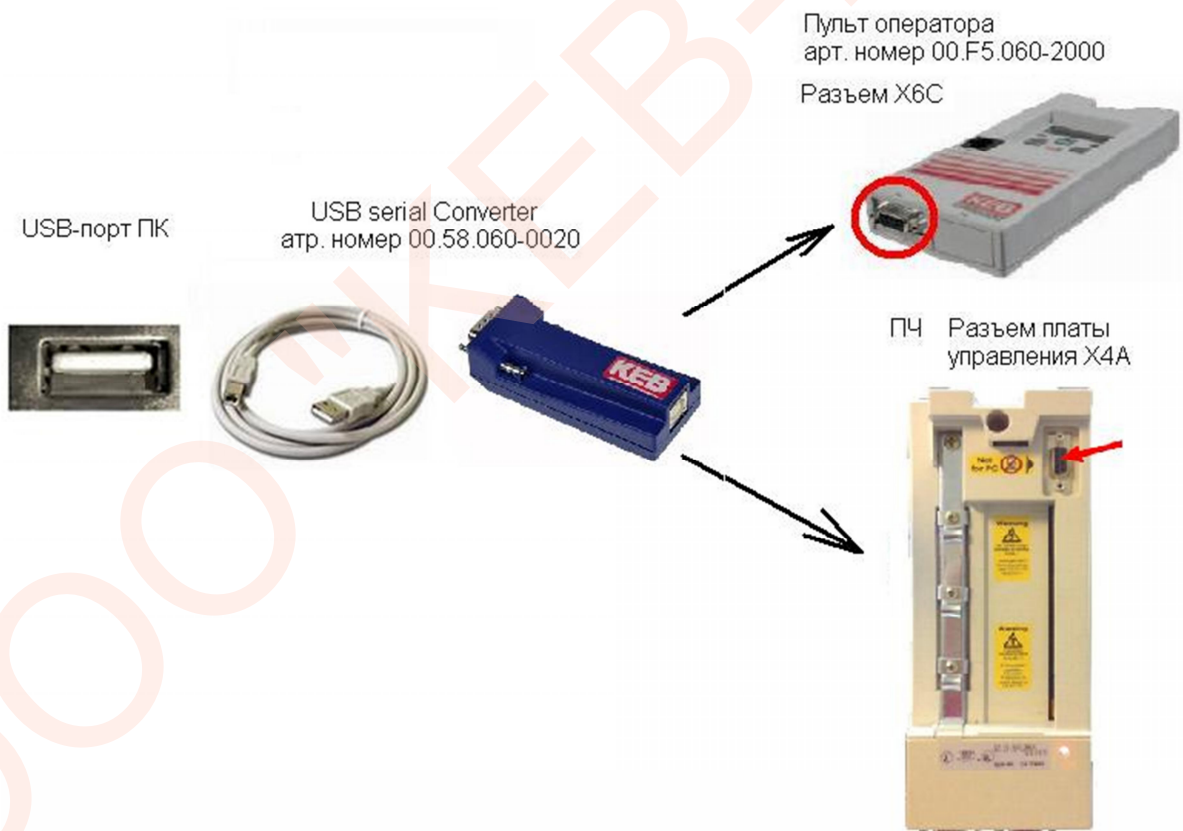

4. («COM-» -)

1. KEB F5;
2. ;
3. (COM-) -Sub9, RS232/485 (USB/RS232,);
4. KEB- (HSP5) (. **00.F5.0C0-0010**) (2);
5. - (RJ45/D-Sub9) (. **00.F5.0C0-0020**) (0,4).

KEB-

RJ45

Кабель-адаптер (RJ45/D-Sub9)

«COM-»

арт. номер : 00.F5.0C0-0020

D-Sub9

RJ45

0,4 m



Кабель KEB-Сервис (HSP5)

арт. номер : 00.F5.0C0-0010

HSP5 TTL

2,0 m

RS232



Кабель KEB-Сервис (HSP5)
арт. номер 00.F5.0C0-0010

Кабель-адаптер (RJ45/D-Sub9)
арт. номер 00.F5.0C0-0020

Пульт оператора
диагностический разъем
X6B (RJ45)


COM-порт ПК

RS232

HSP5 (TTL)

D-Sub9

 RJ45



5. («USB-» -)

1. KEB F5;
2. ;
3. «USB-»;
4. USB serial Converter (. 00.58.060-0020);
5. - (RJ45/D-Sub9) (. 00.F5.0C0-0020) (0,4).



USB serial Converter («USB-» (USB RJ45 3 .) -)

